

---

**👁 Note!**

*Please note that there can be small differences between your product and the images in these instructions.*

---

**👁 Note!**

*Please note that during storage and transport, especially at high ambient temperature, some of the oil and grease used for assembly may leak and stain the packaging. This will not cause damage to the product, wipe off the excessive oil or grease with a cloth.*

---

---

**👁 Note!**

*Before you install this product, check the kit contents. If anything is missing, please contact an Öhlins dealer.*

---

**⚠ Warning!**

*Before you install this product, read the Öhlins Owner's manual. This product is an important part of the vehicle and the vehicle stability.*

---

---

**Cancellation kit, Audi A3/S3 8V**

***35020-23***

**Mounting Instructions**

# MOUNTING INSTRUCTIONS

## **⚠ Warning!**

*We strongly recommend to let an Öhlins dealer install this product.*

## **⚠ Warning!**

*If you work with a lifted vehicle, make sure that it is safely supported to prevent it from tipping over.*

### **Front axle**

**1**

Fix the holder on the electronic component with cable ties 4,8mm x 290 mm.

**2**



Fix the tape on the installed holder. **Adherend must be cleaned and degreased.**

**3**

Fix the electronic component on the damper with cable ties 4,8mm x 290mm.

## **👁 Note!**

*Adherend must be cleaned and degreased.  
Mount the electronic component facing to the rear of the vehicle as shown on the picture.*

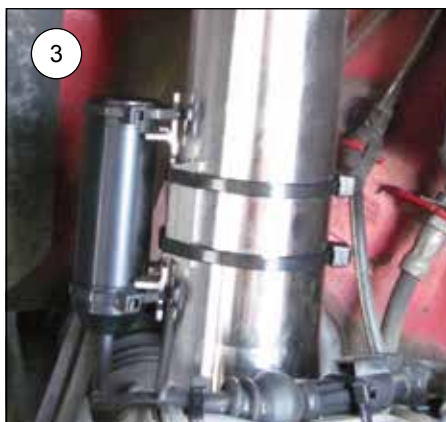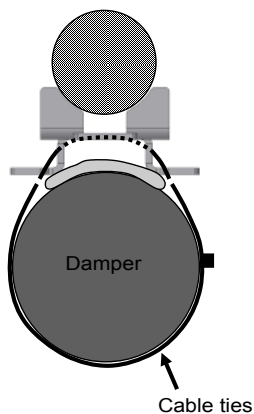

# MOUNTING INSTRUCTIONS

4

Run the standard damper control wire to the supplied electronic component connector.  
Insert the standard connector into the electronic component connector until it locks and fix it with cable ties.



# MOUNTING INSTRUCTIONS

## Rear axle left

1

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the electronic component with cable ties on the wire harness.



# MOUNTING INSTRUCTIONS

2

Fix the wire of the electronic component with cable ties.



# MOUNTING INSTRUCTIONS

## Rear axle right

3

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks. Fix the electronic component with cable ties on filler pipe.





# MOUNTING INSTRUCTIONS

4

Fix the wire of the electronic component with cable ties.



Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI\_35020-23\_0  
Issued 2018-10-10

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB  
Box 722  
S-194 27 Upplands Väsby, Sweden  
Phone +46 8 590 025 00  
fax +46 8 590 025 80



[www.ohlins.com](http://www.ohlins.com)