



Kit Contents		
Description	Part No	Pcs
Cables ties edge clip 4,5x190		8
Cables ties 4,8x290		8
Cancellation kit		4

👁 Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

Cancellation kit EDC, BMW, Z4

35020-05

Mounting Instructions

MOUNTING INSTRUCTIONS

⚠ Warning!

It is advisable to have an Öhlins dealer install the cancellation kit.


⚠ Warning!

If working on a raised vehicle, ensure it is securely supported.

Front axle and rear axle:

1



In some vehicles the connectors do not match. Please remove the coding in the vehicle connector. Use a small cutter.

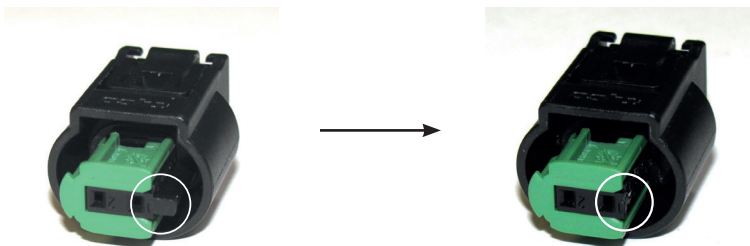

Front axle:

2

Assembly position of the electronic component.

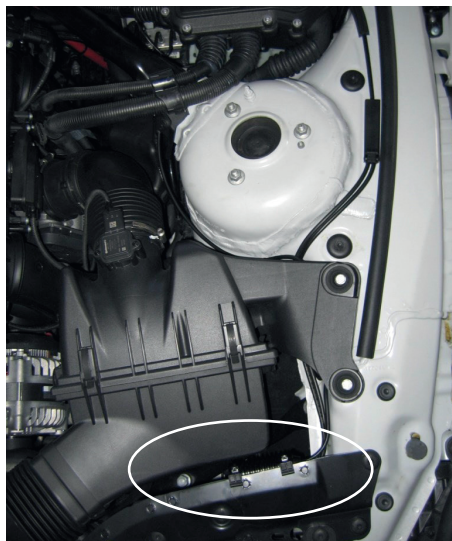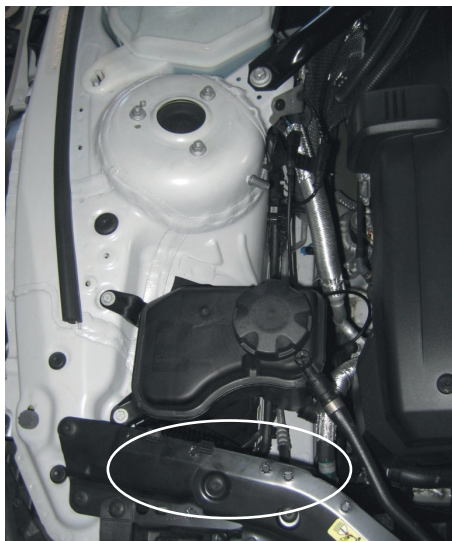

MOUNTING INSTRUCTIONS

3

Fix the electronic component with the supplied edge clips on the front strut.



4

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks.



Rear axle:

5

Assembly position of the electronic component.



Right vehicle side

Rear axle:

6

Fix the electronic component with the supplied edge clips on the front strut. Fix the wire with cable ties on the wire harness.



7

Run the standard damper control wire to the supplied electronic component connector. Insert the standard connector into the electronic component connector until it locks.



👁️ Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_35020-05_0
Issued 2016-05-17

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80



www.ohlins.com